

SNBC BTP_R880NP thermal printer Instructions

PLEASE NOTE: These instructions are included for your records. This printer comes already programmed for the TMS MPC or for the TMS EZ per your order.

To tell how your printer is configured:

1. Hold FEED and power on. Test form should print.
2. Look for Baud Rate and Command CR.

Baud Rate = 2400 bps and Command CR = Enabled: **CONFIGURED FOR MPC.**

Baud Rate = 9600 bps and Command CR = Disabled: **CONFIGURED FOR EZ.**

Instructions on Configuring the for the TMS MPC

To Begin, Hold down FEED button and turn printer on. Press and hold FEED to access settings. To choose an option, press FEED the indicated number of times and then hold FEED to initiate.

Press 3 - Configure

Press 3 - Communication

Press 3 - Serial Interface

Press 2 - Baud Rate

Press 7 - 2400 (printer will confirm baud rate)

Press 1 - Back

Press 1 - Back

Press 5 - Print Settings

Press 6 - CR Command

Press 2 - Enable (printer will confirm CR is enabled)

Press 1 - Back

Press 2 - Exit with Save

Press 1 - Exit

PRINTER SHOULD NOW BE PROGRAMMED FOR THE TMS MPC.

Instructions on Configuring the for the TMS EZ

To Begin, Hold down FEED button and turn printer on. Press and hold FEED to access settings. To choose an option, press FEED the indicated number of times and then hold FEED to initiate.

Press 3 - Configure

Press 3 - Communication

Press 3 - Serial Interface

Press 2 - Baud Rate

Press 7 - 9600 (printer will confirm baud rate)

Press 1 - Back

Press 1 - Back

Press 5 - Print Settings

Press 6 - CR Command

Press 2 - Disable (printer will confirm CR is disabled)

Press 1 - Back

Press 2 - Exit with Save

Press 1 - Exit

PRINTER SHOULD NOW BE PROGRAMMED FOR THE TMS EZ.